


CARE AND FEEDING OF L-TYPE 50 RD. THOMPSON DRUM

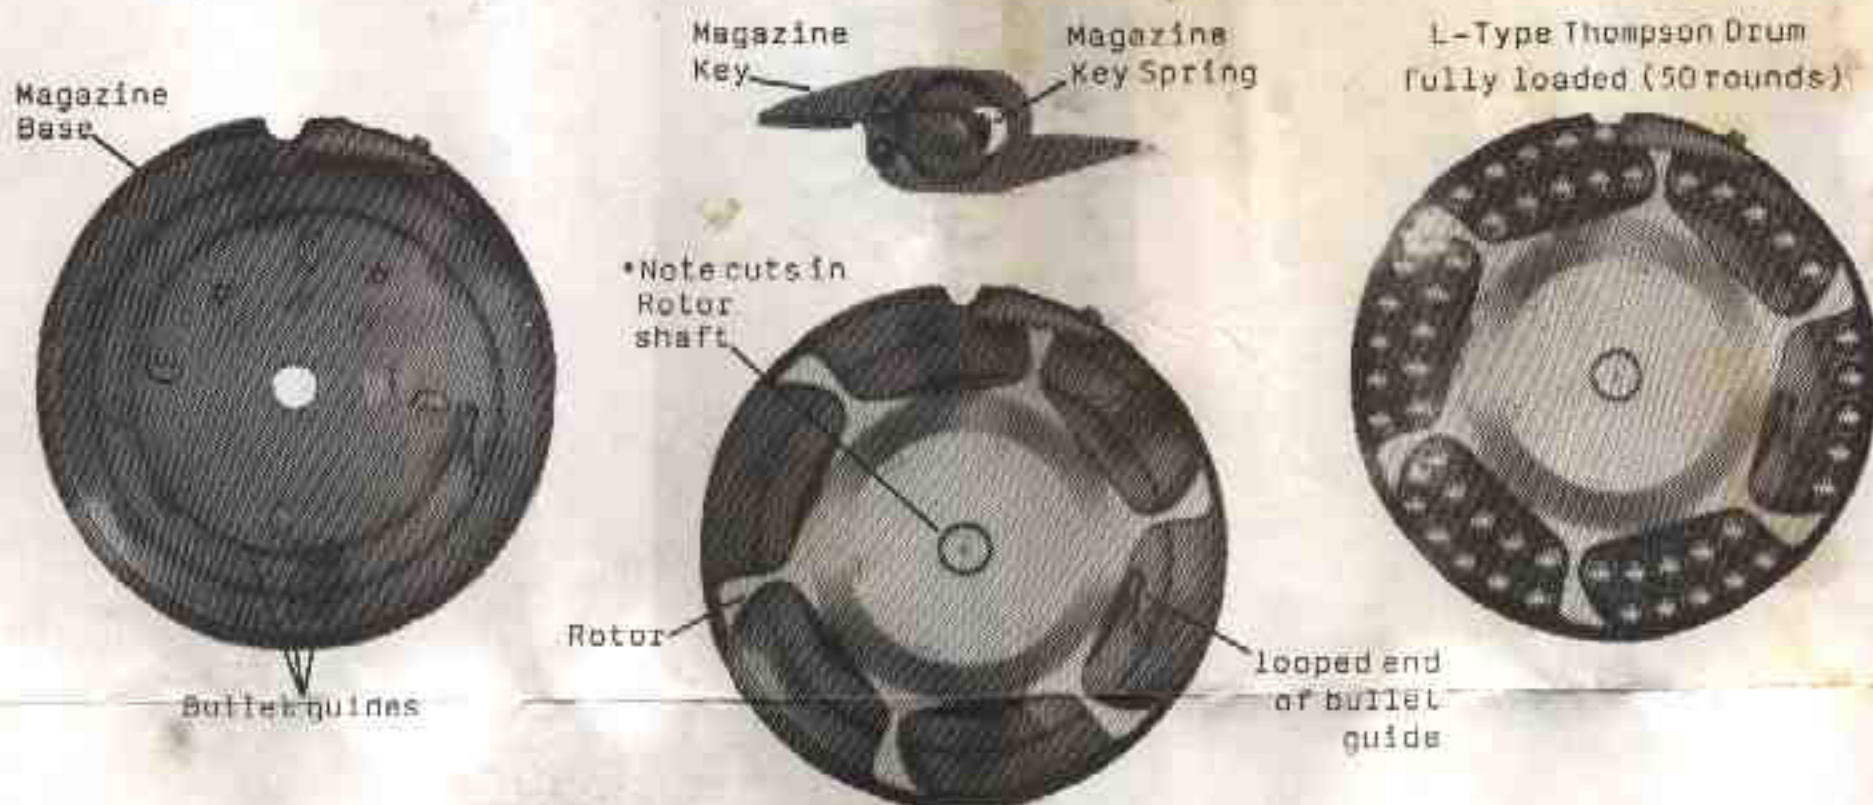

- (1) Lift Magazine Key Spring and slide Magazine Key from Magazine cover. Remove Magazine Cover.
- (2) Place 230 gr. ball ammo base down starting at 12 o'clock position in Magazine Base loading counter-clockwise. Fill each of the ten sections of Rotor with five rounds each until fully loaded.

WARNING: Where looped end of bullet guide ends, do not load in the area as jams will occur when Rotor turns.

- (3) When L-Type Thompson Drum is fully loaded (50 rounds), replace cover and Magazine Key. *Note cuts in Rotor shaft for Magazine Key - exert downward pressure on Magazine cover. Wind Key 9-11 clicks as stated on the Magazine Cover.

WARNING: Do not wind more than the stated amount or after any rounds have been fired.

- (4) To unload, hold Drum upside down and press bullets out forward one by one through the mouth of magazine until empty.

WARNING: Do not open cover when loaded and wound as damage may result.

- (5) To load the L-Type Thompson Drum in your firearm, bolt must be locked back.
- (6) Insert the Drum in the guide rails from the left side of the gun until magazine catch locks in place. The Drum may fit tightly the first few times.